

MOTOMA®

Power into the Future

USER MANUAL

Energy Storage Battery

Version: V23A



48V 100Ah/150Ah/200Ah

51.2V 100Ah/150Ah/200Ah

Table Of Contents

1 Introduction	3
2 Safety Warning	4
2.1 Before Connecting	4
2.2 During Operation	4
3 Unpacking & Overview	5
3.1 Packing List	5
4 Product Overview	6
4.1 General Battery Shape	6
5 Installation	7
5.1 Selecting Mounting Location	7
5.2 Installation Connection 1	7
5.3 Installation Connection 2	8
5.4 Combiner Box	8
5.5 Installation Guideline	9
6 Error Code Information	17
7 Host Soft Operation	18
8 Trouble Shooting	19
8.1 Emergency Process	21
8.1.1 The External Device Catches Fire And Explodes	21
8.1.2 The Battery Catches Fire And Explodes	21

Figure 1 Energy Storage System Overview	3
Figure 2 Front View	6
Figure 3 Installation Connection 1	7
Figure 4 Installation Connection 2	8
Figure 5.1 Breaker	9
Figure 5.2 Breaker	9
Figure 5.3 Breaker	9
Figure 6 Connection Between 1pc Inverter and 1pc Battery	10
Figure 7 Connection Between 1pc Inverter and 2pcs Batteries	10
Figure 8 Connection Between 1pc Inverter and 3pcs Batteries Bottom View	10
Figure 9 Connection Between 3pcs Inverters and 3pcs Batteries Bottom View	11
Figure 10 Dial Address	12
Figure 11 RS485 and CAN Port	12
Figure 12 Reset Battery	13
Figure 13 LED	15
Figure 14 File Location	18
Figure 15 Main Window	18
Figure 16 Reset for Trouble Shooting	19

1 Introduction

The energy storage battery is an essential component of the PV power generation system. It can provide electricity power for the connected loads, and it can also store the electricity power from PV modules, diesel generators, or wind energy generators. When the sun goes down, energy demand is high, or there is a power outage, you can use the energy stored in the system to meet your energy needs at no additional cost. In addition, the Energy storage battery can help you achieve energy self-consumption and ultimately achieve the goal of energy independence.

According to different power consumption, the Energy storage battery can output power during peak power consumption, and can also store energy during low power consumption. Therefore, the PV arrays and inverter are required to match the battery to achieve the highest operating efficiency. For a simple diagram of a typical energy storage system, see Figure 1.

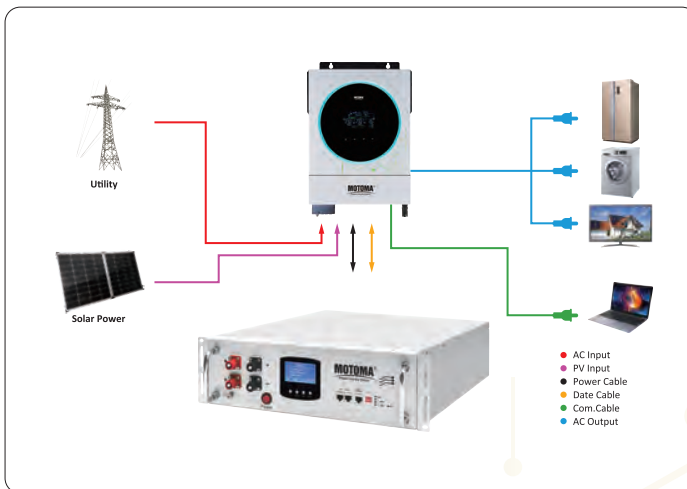


Figure 1 Energy Storage System Overview

- It is very important and necessary to read the user manual carefully before installing or using the battery. Failure to follow any of the instructions or warnings in this document can result in electrical shock, serious injury, death, or may damage the battery and the whole system.
- If the battery is stored for a prolonged time, it is requirement that they are charged every three to six months, and the SOC should be no less than 80%, after fully discharging, The battery needs to be recharged within 12 hours.
- Do not expose cable outside. Do not use cleaning solvents to clean the battery.
- All battery terminals must be disconnected before maintenance.

2 Safety Warning

- Do not expose the battery to flammable or harsh chemicals or vapors.
- Do not paint any part of the battery; include any internal or external components.
- Do not connect battery with PV solar wiring directly.
- Any external object is prohibited to be inserted into any part of the battery.
- Any warranty claims are excluded for direct or indirect damage due to items above.
- Parallel connection within 10 batteries, the maximum 15 batteries, Series connection is NOT allowed.

2.1 Before Connecting

- After unpacking, please check the battery and packing list first, if the battery is damaged or spare parts are missing, Please contact the dealer.
- Before installation, be sure to cut off the grid power and make sure the battery is in the turned off mode.
- Wiring must be correct, do not mix-connect the positive and negative cables, and ensure no short circuit with the external device.
- It is prohibited to connect the battery with AC power directly.
- The BMS in the battery is designed for 48 VDC, DO NOT connect battery in series.
- It is prohibited to connect the battery with different type of batteries.
- Please ensure the electrical parameters of battery system are compatible to inverter.
- Keep the battery away from fire or water.

2.2 During Operation

- If the battery system needs to be moved or repaired, the power must be cut off first and the battery is completely shutdown.
- It is prohibited to connect the battery with different type of battery.
- It is prohibited to put the batteries working with faulty or incompatible inverter.
- In case of fire, only dry powder fire extinguisher can be used, liquid fire extinguishers are prohibited.
- Please do not open, repair or disassemble the battery. We do not undertake any consequences or related responsibility due to violation of safety operation or violating of design, production and equipment safety standards.

3 Unpacking & Overview

3.1 Packing List

You will receive the following parts (Not a full set), sample as follow picture. For customized requirements, please place an order with the manufacturer.

Battery pack	Power output positive cable	Power output Negative cable
		
Inverter COM. cable	Parallel COM. cable (RJ45)	Manual
		
GND	*RS485 COM. box	
		

*NOTE: *Types of communication tools need to place an order.

4 Product Overview

4.1 General Battery Shape

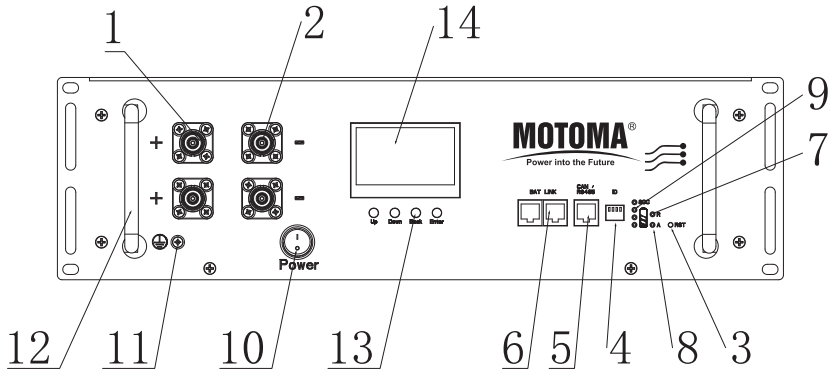


Figure 2 Front View

No.	Description	Silk-screen	Remark
1	Battery positive pole	+	Output terminal
2	Battery negative pole	-	Output terminal
3	Reset	RST	
4	Add Coder	ID	Set Battery address code
5	CAN/RS485 communication port	CAN/RS485	Connect to inverter
6	RS485 communication port	BAT LINK	Parallel use
7	Run LED indication	R	
8	ALARM LED indication	A	
9	Capacity LED indication	SOC	
10	Power switch	POWER	ON/OFF
11	GND	GND	
12	Handle		
13	LCD KEY		
14	LCD		

5 Installation

5.1 Selecting Mounting Location

Consider the following points to install the Energy storage battery:

- The ambient temperature should be between 0°C and 40°C and relative humidity should be between 25% and 85% to ensure optimal operation.
- Install the battery in a dry, protected area with no excessive dust and sufficient air circulation. Do not operate in locations where the temperature and humidity are out of the specified range.

5.2 Installation Connection 1

If output current is small around 100A , the batteries could be connected as below diagram.

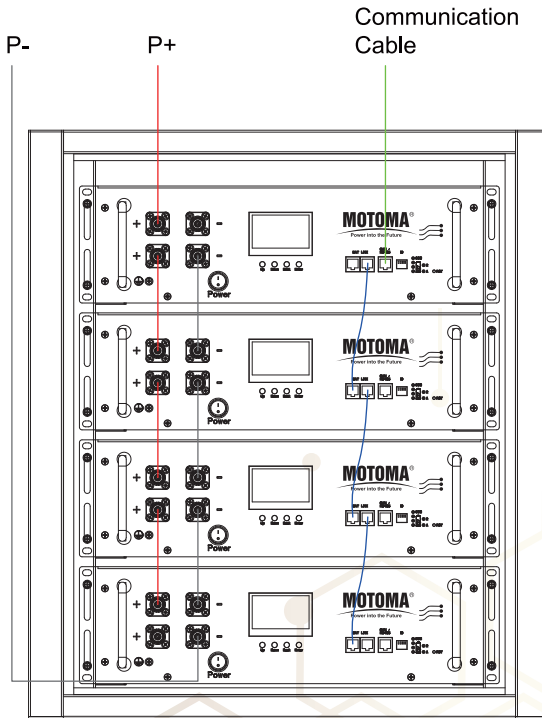


Figure 3 Installation Connection 1

5.3 Installation Connection 2

If output current is higher than 100A, it's need to connect with combiner box or combiner bar as below diagram.

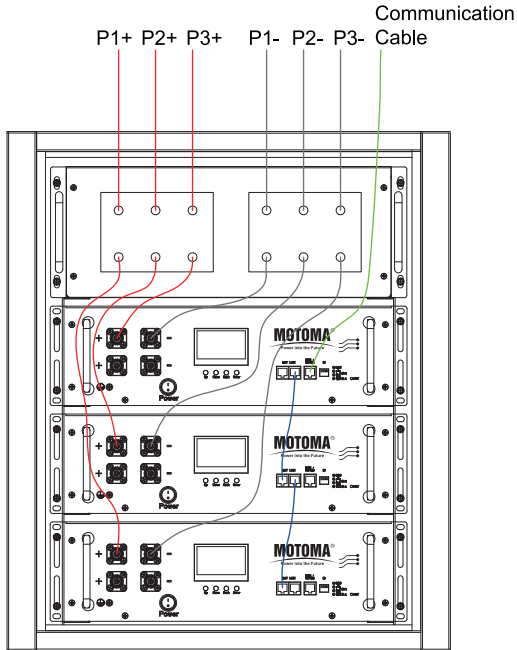


Figure 4 Installation Connection 2

5.4 Combiner Box



If current is small around 100A, could use the Breaker (Figure 5.1).
If the current is higher than 150A, could use the breaker (Figure 5.2).

NOTE: Breaker value should be 20% more than actual current.



Figure 5.1 Breaker



Figure 5.2 Breaker

For using " Fuse"

Like breaker you can use fuse also ,But the fuse is unrecoverable when was blown and need to change to new one.

NOTE: Fuse value should be 10% more than actual current.



Figure 5.3 Breaker

5.5 Installation Guideline

Step 1:

Connection diagram as below.

If inverter needs CAN BUS port / RS485 port. Please insert communication cable (RJ45) to CAN port, RS485 only be used for battery packs parallel mode.

- 1 Battery, 1 Inverter. Single mode.

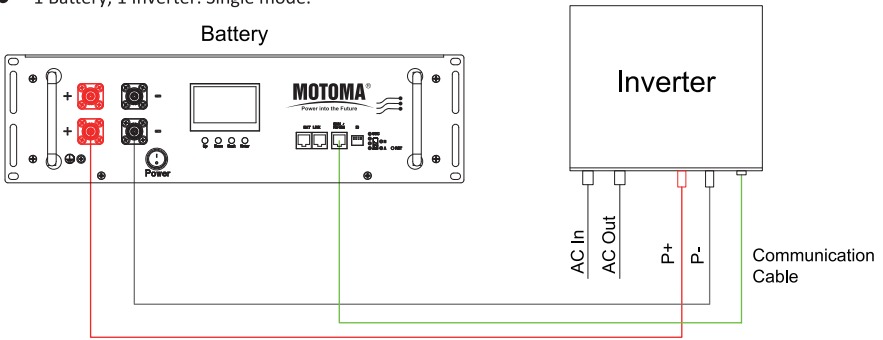


Figure 6 Connection Between 1pc Inverter and 1pc Battery

- 2 Batteries---1 Inverter. Battery 1 is slave. Battery 2 is master.
- The Negative and Positive power cable should be in same length.

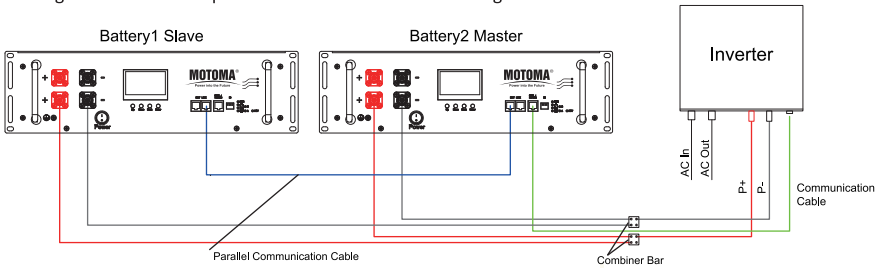


Figure 7 Connection Between 1pc Inverter and 2pcs Batteries

- 3 Batteries---1 Inverter. Battery 1, 2 is slave; Battery 3 is master.
- More batteries in parallel connection, one battery is master, others are slave.
The negative and positive power cables should be in same length.

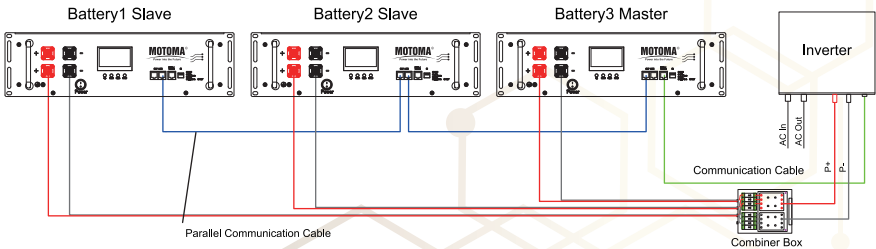


Figure 8 Connection Between 1pc Inverter and 3pcs Batteries Bottom View

- 3 Batteries---3 Inverters.

Mainly cable for 3-phase inverter. battery 1, 2 is slave. Battery 3 is master. More batteries in parallel, one pack is master, other are slave. 3-phase inverter output 380V AC. One inverter is master, others are slave. Please refer to the operation manual of the corresponding inverter for the parallel connection method of the inverter, here is only an example.

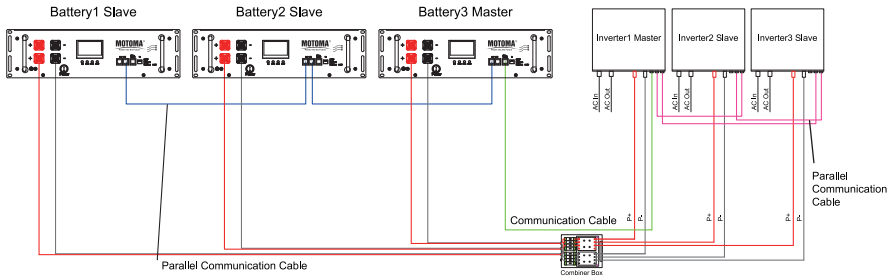


Figure 9 Connection Between 3pcs Inverters and 3pcs Batteries Bottom View

Step 2:

- Connection Guideline.



Communication cable



Inverter



Battery

- Connect communication cable between battery (CAN/RS485) and Inverter(RS485).
- Select protocol on Battery LCD screen, default is 6-PYL.
- Single battery use, DIP is Model 2 (1ON,2 ON,3 OFF,4 ON).
2pcs batteries in parallel, Master is Model 2, Slave is Model 3.
- If select protocol except PYL, DIP is Model 1 for single battery use.
2pcs batteries in parallel, Master is Model 1, Slave is Model 2.

- DIP Regulation

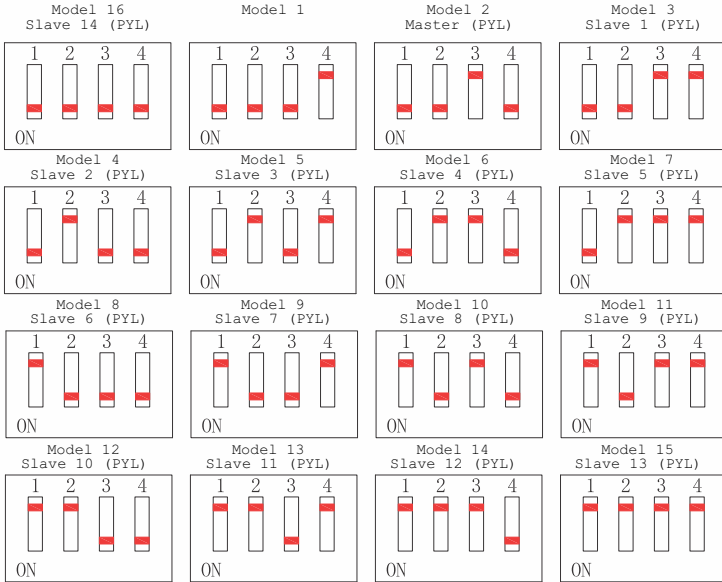


Figure 10 Dial Address

Step 3:

Connect the parallel COM. cable (blue network line). Each battery has 2PCS RS485 port for parallel communication, 1PC CAN/RS485 port for inverter or other device. RS485 port only used for host software and update the firmware.

Figure 8. this is 4 bits coder and communication port. CAN port and RS485A port can be selected as the same time .

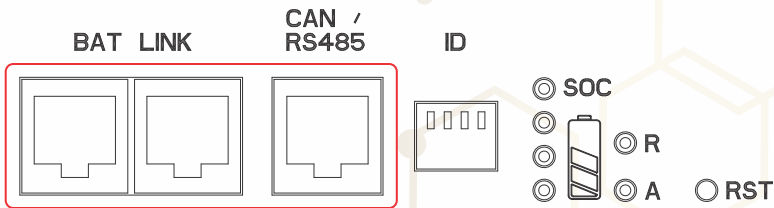
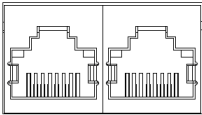
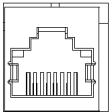


Figure 11 RS485 and CAN Port

Parallel communication		RS485B-8P8C		RS485B-8P8C		
		RJ45		RJ45		
		1,8	RS485-B	9,16	RS485-B	
		2,7	RS485-A	10,15	RS485-A	
		3,6	GND	11,14	GND	
		4,5	NC	12,13	NC	
External communication		RS485A/CAN port				
		RJ45		RJ45		
		1	NC	5	CAN-L	
		2	GND	6	GND	
		3	NC	7	RS485-A	
		4	CAN-H	8	RS485- B	

NOTE: The output connected to the communication cable with a waterproof plug is listed according to the order requirements, which are customized products, and are not listed here.

Step 4:

Process of battery turn-on & turn-off. Confirm that the operation is correct, and the battery function can be turned on after the cable connection is correct, and You can press power switch (ON/OFF) 3 seconds, then the battery start working, it enter standby mode (if there is no power switch, please press the RESET button 3-6 seconds, like as follow picture, LED indicate all running status and check it's self).

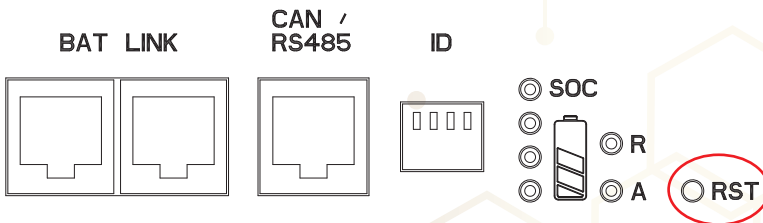


Figure 12 Reset Battery

Step 5:

Run the device, set the external charger or inverter, please set according to the corresponding operation manual. Can not exceed the rated parameter requirements.

Battery Pack Parameters:

No.	Item	General Parameter	
1	Combination Method	48V	51.2V
2	Rated Capacity (Ah)	100/150/200	100/150/200
3	Factory Voltage (V)	48-50	51-53
4	Rate power (Wh)	4800	5120
5	Charging Voltage (max V)	54.75	58.4
6	Charging Current (max A)	0.5C	0.5C
7	Float charge Voltage (V)	53.5	56.5
8	Discharge Cut-off Voltage (V)	≤42V	≤44V
9	Max Discharging current (A)	100	100
10	Charging Current limits (A)	20	20
11	Charge over Current protect (A)	110	110
12	Discharge over Current protect (A)	110	110
13	Internal resistance	≤60mΩ	≤60mΩ
14	Communication protocol	CAN/RS485	CAN/RS485
15	Host soft ware and communication protocol	RS485	RS485
16	Operation Temperature Range	Charge: 0~45°C	
		Discharge: -20~60°C	
17	Storage Temperature Range (recommend)	0~25°C	

Battery Pack Parallel Parameters:

No.	Item	General Parameter	
1	Combination method	48V	51 2V
2	Rated Capacity(Ah) *Parallel	PACK	PACK
3	Factory Voltage (V)	48-50	51-53
4	Charging Voltage (max V)	54.75	58 4
5	Charging Current (max A)	0.2C	0.2C
6	Float charge Voltage (V)	53.5	56.5
7	Discharge Cut- off Voltage (V)	≤42V	≤44V
8	Max Discharging current (A)	0.5C(total)	0.5C(total)
9	Charging Current limits (A) *Parallel	20	20
10	Charge over Current protect(A) *Parallel	110	110
11	Discharge over Current protect(A)	110	110
12	Internal resistance	≤60mΩ	≤60mΩ
13	Communication protocol	CAN or 485	CAN or 485
14	Host soft ware and communication protocol	RS485	RS485
15	Operation Temperature Range	Charge: 0~45°C	
		Discharge: -20~60°C	
16	Storage Temperature Range(recommend)	0~25°C	

Step 6:

Monitors are in running status, and record all parameters, if any mistake, please record it. After start the system, every battery is on, and LED indicate these status.

A : LED indicates

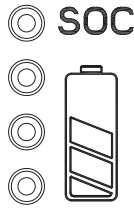


Figure 13 LED

Chart 1: Battery Status

RUN	ALM	SOC			

Chart 2: Battery Capacity

Status	Charge				Discharge			
soc (%)	L4	L3	L2	L1	L4	L3	L2	L1
0-25%	OFF	OFF	OFF	Flash1	OFF	OFF	OFF	Light
26-50 %	OFF	OFF	Flash1	Light	OFF	OFF	Light	Light
51-75 %	OFF	Flash1	Light	Light	OFF	Light	Light	Light
76-100 %	Flash2	Light	Light	Light	Light	Light	Light	Light
RUN LED	Light				Flash2			

Chart 3: LED Flash and Buzzer Mode (Off by Default)

Mode	ON	OFF
Led Flash1	0.5S	1.2S
Led Flash2	0.5S	2.4S

Chart 4: LED Flash Mode

System status	Run status	RUN	ALM	SOC				REMARK
		●	●	●	●	●	●	
Power off / Sleep		OFF	OFF	OFF	OFF	OFF	OFF	All led off
Stand by	Normal	Light	OFF	Lighting for SOC				Stand by mode
	Alarm	Light	OFF					Low volt alarm
Charge	Normal	Flash1	OFF	Lighting for SOC (The LED flash2, while it is the high SOC) Alarm LED do not flash, when the BMS into OVP mode.				
	Alarm	Flash1	OFF					
	OVP	Light	OFF	Light	Light	Light	Light	No charge in, into standby
	OTP	OFF	Light	Lighting for SOC				Stop charge
	OCP	Flash1	OFF	Lighting for SOC				
DisCharge	Normal	Flash2	OFF	Lighting for SOC				
	Alarm	Flash2	OFF					
	UVP	OFF	Light	OFF	OFF	OFF	OFF	Discharge off
	OTP, OCP	OFF	Light	Lighting for SOC				Discharge off
Fail		OFF	Light	OFF	OFF	OFF	OFF	NO charge or discharge

Step 7:

Stop running battery pack.

When it is necessary to stop the charging and discharging of the battery or trouble shooting, please stop the external equipment first, cut off the input and output circuits, and then press the power-off switch for each battery.

6 Error Code Information

	DESCRIPTION	ERROR CODE	SOLUTION
ALARM			
1	Pack Over Voltage	Pack OV	Will not affect the normal use, discharge to clear alarm
2	Cell Over Voltage	Cell OV	Will not affect the normal use, discharge to clear alarm
3	Pack Under Voltage	Pack UV	Will not affect the normal use, charge to clear alarm
4	Cell Under Voltage	Cell UV	Will not affect the normal use, charge to clear alarm
5	Charge Over Current	Charge OC	Will not affect the normal use, discharge to clear alarm
6	Discharge Over Current	Discharge OC	Will not affect the normal use, charge to clear alarm
7	Ambient Temperature Error	AMBIENT TEMP ERROR	Will not affect the normal use, lower temperature to clear alarm
8	MOS Over Temperature	MOS OT	Will not affect the normal use, lower temperature to clear alarm
9	Charge Over Temperature	Charge OT	Will not affect the normal use, lower temperature to clear alarm
10	Discharge Over Temperature	Discharge OT	Will not affect the normal use, lower temperature to clear alarm
11	Charge Under Temperature	Charge UT	Will not affect the normal use, rise temperature to clear alarm
12	Discharge Under Temperature	Discharge UT	Will not affect the normal use, rise temperature to clear alarm
13	Low capacity	Low capacity	Charge
PROTECTION			
14	Pack Over Voltage	Pack OV	Wait till release to OV or discharge
15	Cell Over Voltage	Cell OV	Wait till release to OV or discharge
16	Pack Under Voltage	Pack UV	Wait till release to UV or charge
17	Cell Under Voltage	Cell UV	Wait till release to UV or charge
18	Charge Over Current	Charge OC	Automatic disarming after 1min or discharge
19	Discharge Over Current	Discharge OC	Automatic disarming after 1min or charge
20	Ambient Temperature Error	AMBIENT TEMP ERROR 0027	Stop charge or discharge, wait till recover to normal temperature
21	MOS Over Temperature	MOS OT	Stop Charge and discharge till recover under MOS OTP or check if the MOS is damaged
22	Charge Over Temperature	Charge OT	Stop Charge till recover under OT
23	Discharge Over Temperature	Discharge OT	Stop discharge till recover under OT
24	Charge Under Temperature	Charge UT	Stop Charge till recover under UT
25	Discharge Under Temperature	Discharge UT	Stop discharge till recover under UT
26	Float Stopped	Float Stopped	Fully Charge
27	Discharge Short Circuit	Discharge SC	Remove loads or charge
28	Reverse	Reverse	Stop Charge, remove loads, connect the wire correctly
FAULT			
29	Voltage error	Voltage error	Hardware fault or poor connection, contact seller to find solution
30	Temperature error	Temperature error	Hardware fault or poor connection, contact seller to find solution
31	Current Check Error	Current Check Error	Hardware fault or poor connection, contact seller to find solution
32	Cell unbalance	Cell unbalancet	Hardware fault, contact seller to find solution

7 Host Soft Operation

When the equipment manufacturer confirms that it is necessary, it can authorize to provide the customer with the host software and operating instructions.

DATA	2022-08-31 17:46	文件夹
DOC	2022-11-08 10:19	文件夹
GIF	2022-08-31 17:46	文件夹
BMS_TOOLS	2022-11-02 10:19	应用程序
BMS_TOOLS	2023-06-13 15:10	配置设置
CHINA	2022-10-26 10:45	配置设置
COMLIST	2023-06-13 15:10	配置设置

Figure 14 File Location

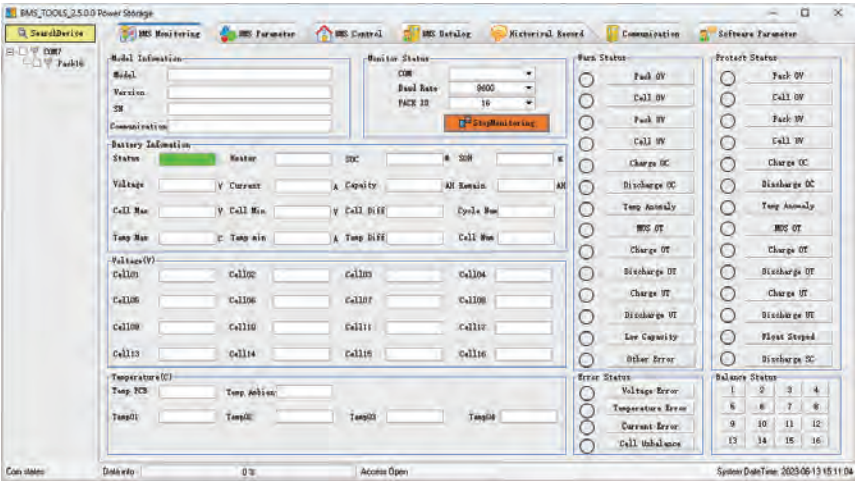


Figure 15 Main Window

8 Trouble Shooting

- Battery pack stops work.

A. Turn on switch; be sure it is ON; if battery is low SOC; it needs to charging in.

B. Battery pack low volt or enter sleep mode, there you will press down RST button 3-6 seconds, or charging in.

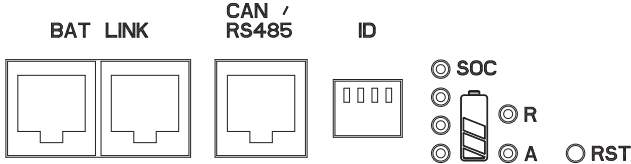


Figure 16 Reset for Trouble Shooting

- No communication, inverter can not received any DATA from BMS.

A. Check whether if communication cable is OK, check RJ45 PIN,

CAN: PIN4=CAN H, PIN5=CAN L,

RS485A: PIN7=485-A, PIN8=485-B.

B. Replace the communication cable. Please give feedback to the dealer and replace.

C. Check inverter or other device which connect to BMS, update the firmware.

D. If the communication function needs to be upgraded, please consult the agent or manufacturer.

E. Confirm your inverter and battery protocol are correct, Different protocol or different connection will make a mistake.

- Battery pack report SOC is mistake.

A. Inverter received Data from Master BMS, but it's SOC < total SOC, as: 9PCS packs has 1800Ah, but inverter read DATA is 1600Ah. So you may check any one is disconnected. Check RS485B COM. Cable (blue), RS485 communication cable, replace the cable which is broken.

RJ45 PIN:

CAN: PIN4=CAN H, PIN5=CAN L,

RS485A: PIN7=485-A, PIN8=485-B.

B. SOC DATA has large tolerance.

Discharge the battery completely first, then charge it fully with a small current, and learn to discharge. Any battery is mistake, we advice you read the BMS Data (When we authorize the terminal to use)with host software. Then we reset the BMS and calibration.

- How to turn on the Battery to discharge.

We recommend method is:

A: reset the single battery's BMS, LED will flash and start work.

B: turn on the power switch on the bottom/front panel.

C: turn on power switch in the combiner box.

WARNING: The operating parameters of the equipment cannot exceed the rated working voltage and current of the battery, exceed the rated volt and current, Can cause damage to the battery or other failures.

Inverter or other external device can not connect the battery. We recommend method is.

- A. Check whether the working parameters of the device and battery are appropriate, and improper parameters cannot be matched.
- B. When the device is turned on, the current is too large, resulting in battery protection. At this time, you should be able to see the LED flashing from the battery panel. In this case, you can adjust your equipment parameters or contact the dealer to solve.
- C. It is necessary to update BMS parameters and match the device, then Reset BMS and restart your device.
- D. Replace bad battery.
- E. There is a bad battery, need to replace, please contact your supplier, need professional installers to operate it. We recommend replacing whole or choose battery has same voltage and same specification.

NOTE: When replacing the cells, the same module needs to be replaced at the same time, and the voltage should be the same.

Need to replace spare parts or emergency maintenance.

Some parts can be obtained from the sales or agency, and the excess parts need to be purchased separately. Be careful, turn off the power switch before replacing.

Need to place some safety device for keep a safety environment.

You'd keep a safe case for battery and external device, Please place safety device, as: fire-fighting sand, fire-fighting blankets, fire-fighting water pipes, Install Monitor sound, light, electricity, smoke and other equipments.

8.1 Emergency process

8.1.1 The External Device Catches Fire and Explodes

- A. Under the condition of ensuring safety, non-operating personnel immediately move to a safe location.
- B. Under the condition of ensuring safety, the operator immediately cut off the external power supply of the equipment and the internal power supply.
- C. Use fire-fighting equipment (the fire-fighting sand, fire-fighting blankets, fire-fighting water pipes).
- D. If you cannot completely extinguish the fire, please call the local fire department for help.
- E. Keep the accident site data so that the source of the accident can be traced.

8.1.2 The Battery Catches Fire and Explodes

- A. Under the condition of ensuring safety, non-operating personnel immediately move to a safe location.
- B. Under the condition of ensuring safety, the operator immediately cut off the external power supply of the equipment and the internal power supply.
- C. Use fire-fighting equipment (the fire-fighting sand, fire-fighting blankets, fire-fighting water pipes).
- D. If you cannot completely extinguish the fire, please call the local fire department for help.
- E. Keep the accident site data so that the source of the accident can be traced.

NOTE: When replacing the cells, the same module needs to be replaced at the same time, and the voltage should be the same.

PMO-CTA-LFP-M87UB-User manual-V23B-AE21



MOTOMA[®]

Power into the Future

QUALITY CREATES BRAND
SERVICE ENHANCES VALUE



SHENZHEN MOTOMA POWER CO.,LTD.

© 502, Bldg.N2, Tian An Cyber Park, FengGang, Dongguan, Guangdong, China

☎ +86-769-8216-3796

✉ info@motoma.cn

🌐 www.motoma.cn

